



Quick Installation Guide


Ouattro 24V 48V 5000VA 230Va

www.victronenergy.com

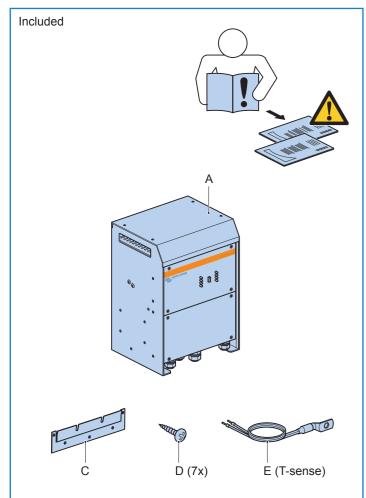

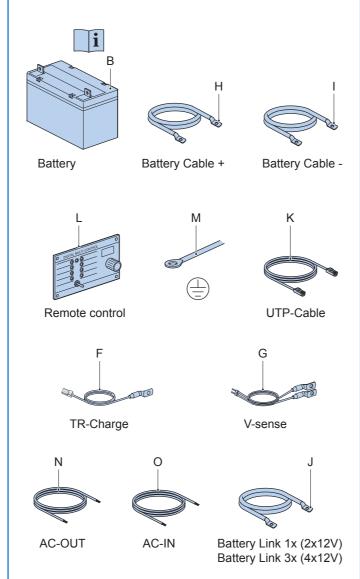

Not included

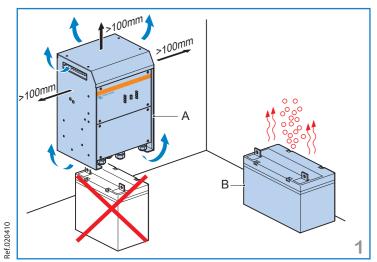

Fuse (not included)

For fuse values: refer to the user manual

